

[See all 19 Products in Family](#)

10mm Aperture, 18mm FL VIS/NIR Fiber Refocusing Assembly



Fiber Refocusing Assembly

Stock **#88-182** [CONTACT US](#)

⊖ 1 ⊕ ₹15,930

ADD TO CART

Volume Pricing

Qty 1-10	₹15,930 each
Qty 11-24	₹14,040 each
Qty 25-49	₹13,320 each
Need More?	Request Quote

Product Downloads

General

Refocusing Assembly **Type:**

Anodized Aluminum **Housing Material:**

Compatible with [#88-180](#), [#88-181](#), [#88-190](#), & [#88-191](#) Fiber Collimators **Note:**

Physical & Mechanical Properties

15.88 **Diameter (mm):**

10.0 **Aperture Size:**

16.38 **Length (mm):**

Optical Properties

N-BK7 **Substrate:**

350 - 2200 **Wavelength Range (nm):**

18.00 **Focal Length FL (mm):**

Environmental & Durability Factors

-40 to 100 **Operating Temperature (°C):**

Regulatory Compliance

Compliant **RoHS 2015:**

Compliant **Reach 209:**

View **Certificate of Conformance:**


United States **Country of Origin:**

Edmund Optics India Private Limited **Imported By:**

Product Details


- Can Be Coupled to Standard 0.22 NA Fiber Optic Cables
- Options Available for UV-VIS or VIS-NIR
- Multiple Focal Length or Aperture Options

Focusable Collimators consist of two separate components: a fiber optic collimator and a fiber optic refocusing assembly. The fiber optic collimator utilizes a PCX lens positioned at the focal length from the optical fiber tip. These collimators are available with FC or SMA threads, and easily couple to standard 0.22 NA fiber optic cables. Focusable Collimators expand the beam and decrease the divergence by the ratio of the fiber core diameter to the collimator aperture. Fiber optic refocusing assemblies mount directly to the fiber optic collimator and allow for optimal focus at a given distance.

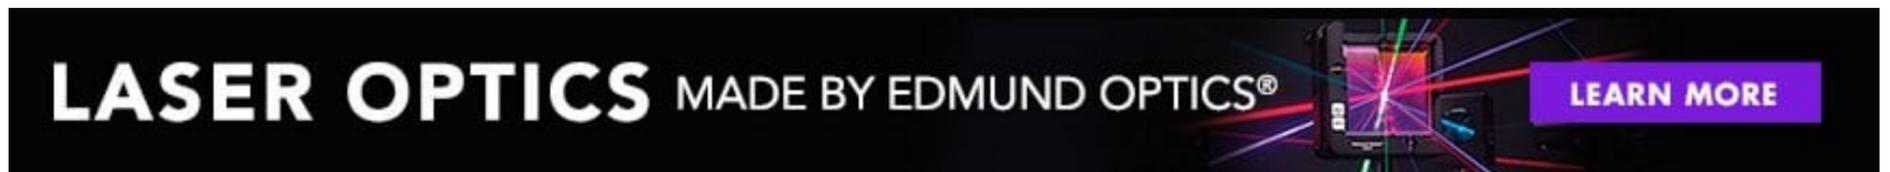


Technical Information

Fiber with 4mm Aperture Fiber Optic Collimator

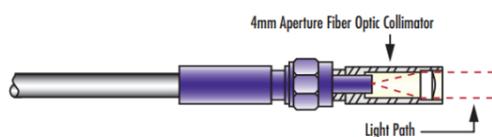


The 4mm Aperture Fiber Optic Collimator threads directly onto FC or SMA fiber.

Fiber with 10mm Aperture Fiber Optic Collimator

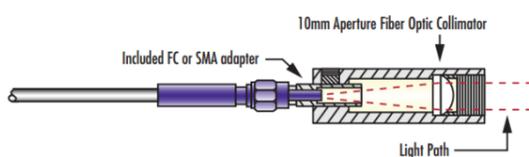

Each 10mm Aperture Fiber Optic Collimator includes an FC or SMA adapter that is inserted into the collimator and locked by a set screw.

Fiber with 10mm Aperture Fiber Optic Collimator and Refocusing Assembly

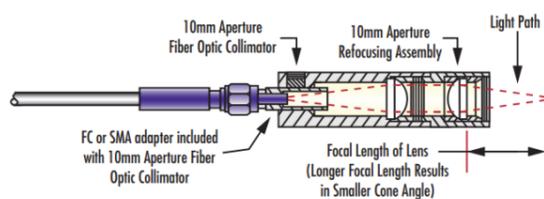

A 10mm Aperture Refocusing Assembly can then be directly threaded onto the 10mm Aperture Fiber Optic Collimator.

Collimator Description	Stock Number	Compatible Refocusing Assembly
4mm Aperture UV/MS Fiber Optic Collimator, FC	#88-189	No Compatible Refocusing Assemblies
4mm Aperture UV/MS Fiber Optic Collimator, SMA	#88-173	No Compatible Refocusing Assemblies
4mm Aperture VS/NIR Fiber Optic Collimator, FC	#88-188	No Compatible Refocusing Assemblies
4mm Aperture VS/NIR Fiber Optic Collimator, SMA	#88-172	No Compatible Refocusing Assemblies
10mm Aperture UV/MS Fiber Optic Collimator, FC	#88-191	#88-182 , #88-183 , #88-184 , #88-185 , #88-186 , & #88-187
10mm Aperture UV/MS Fiber Optic Collimator, SMA	#88-181	#88-182 , #88-183 , #88-184 , #88-185 , #88-186 , & #88-187
10mm Aperture VS/NIR Fiber Optic Collimator, FC	#88-190	#88-182 , #88-183 , #88-184 , #88-185 , #88-186 , & #88-187
10mm Aperture VS/NIR Fiber Optic Collimator, SMA	#88-180	#88-182 , #88-183 , #88-184 , #88-185 , #88-186 , & #88-187

;