

[See all 10 Products in Family](#)

2400 Grooves/mm, 64.5mm Dia., 180nm Rowland Circle Concave Diffraction Grating

See More by [ZEISS](#)



ZEISS Concave Diffraction Gratings



Stock #11-538 **2 In Stock**

- 1 + MRP ₹65,075

● Price inclusive of all taxes

ADD TO CART

Volume Pricing	
Qty 1-9	₹65,075 each
Qty 10-24	₹58,567 each
Need More?	Request Quote

Product Downloads

General

Rowland Circle **Type:**

Physical & Mechanical Properties

64.50 **Diameter (mm):**

Sinusoidal	Groove Profile:
11.8	Edge Thickness ET (mm):
Optical Properties	
2400 ±4	Groove Density (grooves/mm):
180	Blaze Wavelength (nm):
Bare Aluminum	Coating:
ZERODUR®	Substrate: <input type="checkbox"/>
≥36 @ 200nm ≥36 @ 250nm ≥32 @ 350nm	Diffraction Efficiency (%):
749.89	Radius of Curvature (mm):
-40	Angle of Incidence, α (°):
9.4	Diffraction Angle, β @ 200nm (°):
-4.4	Diffraction Angle, β @ 300nm (°):
574.4	Object Distance, l_a @ 200nm:
739.9	Focal Distance, l_b @ 200nm:
≥58	Diffraction Area Diameter (mm):

Regulatory Compliance	
View	Certificate of Conformance:
Germany	Country of Origin:
Edmund Optics India Private Limited 267, Greystone Building, Second Floor, 6th Cross Rd, Binnamangala, Stage 1, Indiranagar, Bengaluru, Karnataka, India 560038 Phone: +91- 80-6845 0000	Imported By:


Product Details

- High Grating Efficiency and Low Stray Light
- Holographically Produced to Minimize Aberrations
- Rowland Circle or Polychromator Mounting Configurations


ZEISS Concave Diffraction Gratings combine dispersive and imaging properties into a single optical component for integration into spectroscopic systems. These concave gratings are produced holographically, optimizing the focal plane and minimizing aberrations over the wavelength range of the grating. ZEISS Concave Diffraction Gratings are designed to have high grating efficiency and minimized stray light, improving the spectral resolution and signal to noise ratios of spectrometers. Diffraction gratings with Rowland Circle or polychromator mounting configurations are available. Rowland Circle gratings are ideal for spectroscopic systems designed on a Rowland Circle while polychromator gratings are optimized for setups with a fixed arrangement of the entrance slit, grating, and plane sensor.

Technical Information

Rowland Circle Configuration

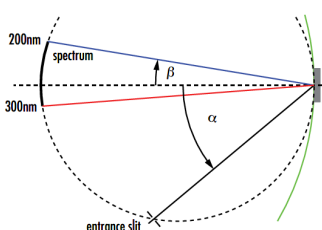

Polychromator Configuration

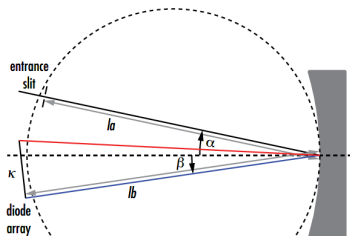

Special Handling

These optics require special handling to avoid damage and ensure long-term performance. Proper handling, cleaning, and storage are essential to maintain optical quality. Explore our [Optics Cleaning Resources](#) for step-by-step guides and best practices. For personalized assistance, [Email us](#) or [Chat](#) with our technical support team.



Component Handling Tools

;