

[See all 10 Products in Family](#)

## 600 Grooves/mm, 30mm Dia., 230nm Polychromator Concave Diffraction Grating

See More by [ZEISS](#)



ZEISS Concave Diffraction Gratings



Stock #11-541 **4 In Stock**

MRP ₹67,092

● Price inclusive of all taxes

**ADD TO CART**

Volume Pricing	
Qty 1-9	₹67,092 each
Qty 10-24	₹60,383 each
Need More?	<a href="#">Request Quote</a>

Product Downloads

**General**

Polychromator **Type:**

**Physical & Mechanical Properties**

30.00 **Diameter (mm):**

Blazed	<b>Groove Profile:</b>
8.0	<b>Edge Thickness ET (mm):</b>
<b>Optical Properties</b>	
600 ±1	<b>Groove Density (grooves/mm):</b>
230	<b>Blaze Wavelength (nm):</b>
Bare Aluminum	<b>Coating:</b>
N-BK7	<b>Substrate:</b> <input type="checkbox"/>
≥70 @ 230nm ≥28 @ 400nm ≥15 @ 600nm	<b>Diffraction Efficiency (%):</b>
109.77	<b>Radius of Curvature (mm):</b>
-7.24	<b>Angle of Incidence, <math>\alpha</math> (°):</b>
14.24	<b>Diffraction Angle, <math>\beta</math> @ 200nm (°):</b>
113.64	<b>Object Distance, <math>l_a</math> @ 200nm:</b>
104.77	<b>Focal Distance, <math>l_b</math> @ 200nm:</b>
≥24	<b>Diffraction Area Diameter (mm):</b>

<b>Regulatory Compliance</b>	
<a href="#">View</a>	<b>Certificate of Conformance:</b>
Germany	<b>Country of Origin:</b>
Edmund Optics India Private Limited 267, Greystone Building, Second Floor, 6th Cross Rd, Binnamangala, Stage 1, Indiranagar, Bengaluru, Karnataka, India 560038 Phone: +91- 80-6845 0000	<b>Imported By:</b>


## Product Details

- High Grating Efficiency and Low Stray Light
- Holographically Produced to Minimize Aberrations
- Rowland Circle or Polychromator Mounting Configurations


ZEISS Concave Diffraction Gratings combine dispersive and imaging properties into a single optical component for integration into spectroscopic systems. These concave gratings are produced holographically, optimizing the focal plane and minimizing aberrations over the wavelength range of the grating. ZEISS Concave Diffraction Gratings are designed to have high grating efficiency and minimized stray light, improving the spectral resolution and signal to noise ratios of spectrometers. Diffraction gratings with Rowland Circle or polychromator mounting configurations are available. Rowland Circle gratings are ideal for spectroscopic systems designed on a Rowland Circle while polychromator gratings are optimized for setups with a fixed arrangement of the entrance slit, grating, and plane sensor.

## Technical Information

### Rowland Circle Configuration

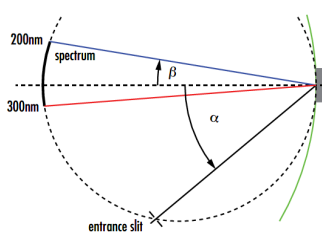

### Polychromator Configuration

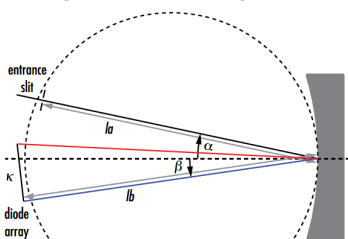

## Special Handling

These optics require special handling to avoid damage and ensure long-term performance. Proper handling, cleaning, and storage are essential to maintain optical quality. Explore our [Optics Cleaning Resources](#) for step-by-step guides and best practices. For personalized assistance, [Email us](#) or [Chat](#) with our technical support team.



Component Handling Tools

---

;