

TECHSPEC® 631nm CWL, 25mm Dia, 21nm Bandwidth, OD 6 Fluorescence Filter



Stock #33-327 **5 In Stock**

- 1 + MRP ₹36,018

i Price inclusive of all taxes

ADD TO CART

Volume Pricing	
Qty 1-5	₹36,018 each
Qty 6-25	₹28,754 each
Qty 26-49	₹27,039 each
Need More?	Request Quote

Product Downloads

General

Bandpass Filter **Type:**

 Alexa Fluor® 633 Excitation **Compatible Fluorophore:**

Physical & Mechanical Properties

25.00 +0.00/-0.10 **Diameter (mm):**

21.21 **Clear Aperture CA (mm):**

Construction:
Mounted in Black Anodized Ring

Physical Durability:
Adhesion per ML-PRF-13830B, Section C.4.5.12
Moderate abrasion per ML-PRF-13830B, Section C.4.5.11
Cleaning per ML-C-48497A Section 4.5.4.2

Substrate Thickness (mm):
2.00 ±0.25

Optical Properties

Angle of Incidence (°):
0 ±5

Bandwidth (nm):
21.00

OD 5 Blocking Wavelength Range (nm) :
652 - 699 & 800 - 925

OD 6 Blocking Wavelength Range (nm):
300 - 597 & 699 - 800

Optical Density OD (Average):
≥6.0

Average Transmission (%):
>93 over Bandwidth

Center Wavelength CWL (nm):
631.00

Full Width-Half Max FWHM (nm):
28.00

Substrate:
BOROFLOAT®

Coating:
Hard Coated

Surface Quality:
60-40

Transmission (%):
93.00

Blocking Wavelength Range (nm):
250 - 1100

Transmitted Wavefront, RMS:
λ/4 (prior to coating)

Threading & Mounting

Mount Thickness (mm):
3.5 ±0.1

Environmental & Durability Factors

Environmental Durability:
Humidity per ML-STD-810H, Section 507.6
Temperature per ML-STD-810H, Section 501.7 and 502.7

Regulatory Compliance

RoHS 2015:
Compliant

Certificate of Conformance:
[View](#)

Reach 247:
Compliant

Country of Origin:
United States

Imported By:
Edmund Optics India Private Limited
267, Greystone Building, Second Floor,
6th Cross Rd, Binnamangala,
Stage 1, Indiranagar, Bengaluru,
Karnataka, India 560038
Phone: +91- 80-6845 0000

Need different specs or modifications?

Edmund Optics offers comprehensive custom manufacturing services for optical and imaging components tailored to your specific application requirements. Whether in the prototyping phase or preparing for full-scale production, we provide flexible solutions to meet your needs. Our experienced engineers are here to assist—from concept to completion.

Our capabilities include:

- Custom dimensions, materials, coatings, and more
- High-precision surface quality and flatness
- Tight tolerances and complex geometries

- Scalable production—from prototype to volume
- Learn more about our [custom manufacturing capabilities](#) or submit an inquiry [here](#).

Product Details

- Common Wavelengths for Popular Fluorophores
- Excitation Filters and Emission Filters Available
- >93% Transmission
- >OD 6 Blocking, <3% from Edge of Bandwidth
- [Fluorescence Filter Sets](#) and [Pre-Mounted Fluorescence Filter Cube Sets](#) Also Available


Our TECHSPEC® Fluorescence Bandpass Filters perfectly match common fluorophores' absorption and emission characteristics in fluorescence imaging applications. Excitation and emission filters are available, featuring high transmissions in the passband ($\geq 93\%$ for VIS designs) and >OD 6 blocking outside of the passband. These filters are also ideal components in applications using spectroscopic fluorescence detection, including analytical chemistry and biomedical instruments such as DNA sequencers and polymerase chain reaction (qPCR) devices. Each filter features state-of-the-art hard-sputtered coatings and is mounted in a black anodized ring for easy system integration.

Fluorescence microscopy and spectroscopy applications typically use a combination of three filters for each color channel (detection of individual fluorophores), an excitation and an emission bandpass filter, as well as a dichroic filter (also dichroic beamsplitters, such as our [Fluorescence Dichroic Filters](#) and [High-Performance Fluorescence Dichroic Filters](#)). More information on fluorescence microscopy and an example beam path can be found in the AppNote [Fluorophores and Optical Filters for Fluorescence Microscopy](#). In short, excitation filters "clean up" the excitation light used to excite the fluorophores in the sample. On the other hand, emission filters allow only the emitted fluorescence to pass through to the detector while effectively blocking the excitation light and different wavelengths, producing high-contrast images and superior image clarity.

Our fluorescence bandpass filters are engineered with cutting-edge technology and are designed to enhance signal-to-noise ratios, improve contrast, and deliver excellent performance in optical imaging applications. These filters are designed to be widely compatible with microscopes from Nikon, Olympus, and Zeiss, making them suitable for various imaging applications, including widefield, confocal, multiphoton, and other fluorescence microscopy modalities. Whether you are imaging fixed cells, live cells, or tissues, our filters are engineered to deliver consistent and reliable image quality. Additionally, these filters can be used for fluorescence detection in qPCR, flow cytometry, or multi-well plate readers in applications such as immunofluorescence or high-throughput screening in which fluorescent molecules or dyes detect specific molecular structures or DNA sequences.

TECHSPEC® Fluorescence Bandpass Filters are optimized for maximum transmission within a specific wavelength range. They effectively isolate fluorescence signals from background noise, enhancing sensitivity and enabling more accurate detection of fluorophores. Explore our range of filters today and unleash the full potential of your fluorescence microscopy setup.

Technical Information

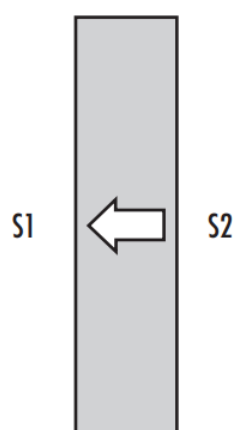

All mounted TECHSPEC® Optical Filters have an arrow on the side of the mount that points to the filter-coated surface for quick reference. Filter oriented such that arrow points to filter coated surface S1. Anti-reflective (AR) coating is applied to S2.

Compatible Mounts