

Blue Enhanced Response, 5.1mm², Silicon Detector



Silicon Photodiodes

Stock **#53-378** 20+ In Stock

-

1

+

₹4,328

ADD TO CART

Volume Pricing	
Qty 1-4	₹4,328 each
Qty 5+	₹3,741 each
Need More?	Request Quote

Product Downloads

General	
Unbiased	Type:
Typical Applications: Low light levels, wide spectral bandwidth response	
0.2 @ 0 V/50 Ω, 410nm	Rise Time (μs):
PIN-5DP/SB	Model Number:

Blue Enhanced Response	Note:
Quartz	Protective Window:
TO-5	Package:
Physical & Mechanical Properties	
5.1	Active Area (mm²):
PIN	Construction:
0.36	Outer Diameter (inches):
1.5	Length of Leads (inches):
Optical Properties	
4.34 x 10 ¹² @ 0 V, 410nm	Detectivity (cmHz ^{1/2} /W):
Electrical	
450 @ 0 V	Terminal Capacitance (pF):
0.2	Responsivity @ 410nm (A/W):
5.2 x 10 ⁻¹⁴	Noise Equivalent Power NEP (W/ Hz ^{1/2}):
150.00	Shunt Resistance (MΩ):
Environmental & Durability Factors	
-40 to 100	Operating Temperature (°C):
Regulatory Compliance	
Compliant	RoHS 2015:
View	Certificate of Conformance:
Malaysia	Country of Origin:
Edmund Optics India Private Limited	Imported By:

Product Details

- UV Enhanced, Blue Enhanced, and Normal Response Options
- Active Areas from <1 to 100mm²
- C-Mount and S-Mount Mounting Solutions Available

Through the photovoltaic effect, detectors provide a means of transforming light energy to an electrical current. The root of the theory behind this phenomenon is a small energy gap between the valence and conduction bands of the detector. When light, with enough energy to excite an electron from the valence to the conduction band, is incident upon the detector, the resulting accumulation of charge leads to a flow of current in an external circuit. Since light is not the only source of energy that can excite an electron, detectors will have some amount of current that is not representative of incident light. For example, fluctuations in thermal energy can easily be mistaken for light intensity changes. A variety of these “non-light” contributions are present and, when summed up, make up the total noise within the detector.

The ratio of the overall signal output to the noise level is known as the signal to noise ratio (s/n) and can be used to determine if noise will be a concern within a particular application. While noise is certainly a key means of characterizing detectors, it is only one of the characteristics which should be considered when selecting a detector.


Different Operation Modes

Photovoltaic (Unbiased): During PV operation, no external bias is applied to the photodiode. Since Dark Current is a function of bias magnitude, PV operation eliminates Dark Current as a source of noise. In this case, the NEP will be lower, thereby allowing greater sensitivity at lower wavelengths. This makes it ideal for low signal detection. One disadvantage is the slightly lower responsivity at higher wavelengths (see graph).

Photoconductive (Biased): During PC operation, a reverse bias on the photodiode results in a number of response advantages, such as a faster rise time. This makes this type of operation more suitable for high frequency applications. One inconvenience is that the dark current increases with this applied biased current, so noise is introduced into the system.

Technical Information

T0-5 Mount
(#53-371, #53-375, #53-378,
#57-509, #57-510)

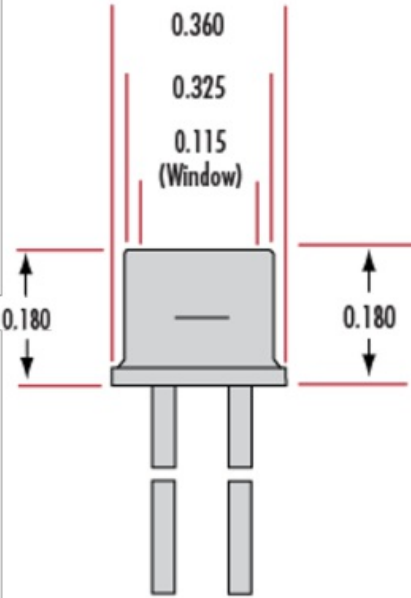

Pin Circle Dia. = 0.200

For:
#53-371
#53-378

For:
#53-375
#57-509
#57-510



Units: inches