

IR Neutral Density Filter Kit, 50mm Diameter



Infrared (IR) Neutral Density (ND) Filters

Stock #87-206 [CONTACT US](#)

1 [-](#) [+](#) MRP ₹8,74,616

Price inclusive of all taxes

ADD TO CART

| | |
|----------------|-------------------------------|
| Volume Pricing | |
| Qty 1+ | ₹8,74,616 each |
| Need More? | Request Quote |

Product Downloads

General

Filters Included :
OD: [0.3](#), [0.5](#), [0.6](#), [0.9](#), [1.0](#), [1.3](#), [1.5](#), [2.0](#), [3.0](#)

Type:
Neutral Density Filter

Number of Filters:
9.00

Physical & Mechanical Properties

Diameter (mm):
50.00

Optical Properties

| | |
|-------------------|-------------------------------------|
| Germanium (Ge) | Substrate: <input type="checkbox"/> |
| Metallic Based ND | Coating: |
| 80-50 | Surface Quality: |
| 2000 - 14,000 | Blocking Wavelength Range (nm): |
| 2 - 14 | Wavelength Range (μm): |
| 3 - 5 λ | Surface Flatness (P-V): |


Regulatory Compliance

| | |
|---|-----------------------------|
| View | Certificate of Conformance: |
| United States | Country of Origin: |
| Edmund Optics India Private Limited 267, Greystone Building, Second Floor, 6th Cross Rd, Binnamangala, Stage 1, Indiranagar, Bengaluru, Karnataka, India 560038 Phone: +91- 80-6845 0000 | Imported By: |

Product Details

- Spectrally Flat from 2 μm to 14 μm
 - Precision Germanium Substrate
 - **Due to material supply chain disruptions with germanium, there may be increased lead times and price changes on our germanium products. For more information, please contact our customer service team.**
- Infrared (IR) Neutral Density (ND) Filters feature excellent linearity over a wide spectral band of 2 μm to 14 μm . Ideal for thermal and medical imaging, the filters are available in a variety of densities and 2 size options. Attenuation is achieved by a metal alloy coating, which employs a combination of absorption and reflection to achieve the stated transmittance value. Infrared (IR) Neutral Density (ND) Filters feature a germanium substrate and are available in 12.5, 25, and 50mm diameters with varying transmissions and optical densities. All 5 optical densities are available as part of our Neutral Density Filter Kits. The kits are ideal for integration with our filter wheels.
- Please contact our [Applications Engineering Department](#) to discuss custom size and density options.

Technical Information

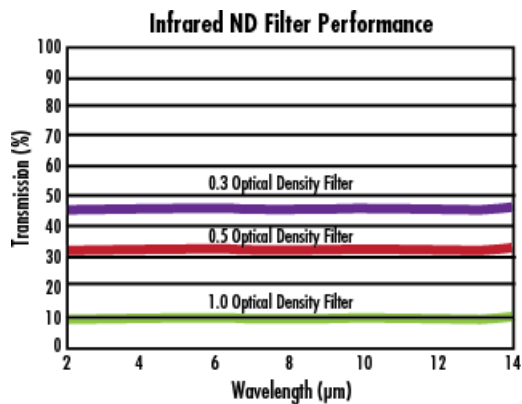

Special Handling

Germanium Optics Handling and Cleaning Guidelines

Germanium optics require special handling and cleaning procedures. Always wear gloves during handling to prevent contamination, and wash hands afterward. Avoid contact between Germanium dust and the eyes, skin, or clothing. When not in use, store optics sealed and covered at temperatures between 20°C and 25°C. Do not expose them to temperatures exceeding 100°C when in use.

Handling Guidelines

- Always wear [gloves](#) to prevent damage from skin oils.
- If Germanium dust is present, take the following precautions:
 - Wear safety glasses to protect eyes.
 - Use a dust mask or face mask to avoid inhalation.
 - Wear [gloves](#) to prevent skin contact.
- Maintain storage temperature between 20°C and 25°C with humidity below 30%.
- Wrap Germanium optics in a [lens cloth](#) or [pouch](#) and seal in a [container](#) when not in use.
- Germanium is brittle and heavy — always place it on soft surfaces and avoid dropping it.

Approved Cleaning Solvents

- Ethanol
- Isopropyl Alcohol
- Methanol
- Reagent-Grade Acetone
- Liquid CO₂
- [Shop Now](#)

