



[See all 15 Products in Family](#)

Orange Fluorescent Filter (ICF-020), 25mm Diameter

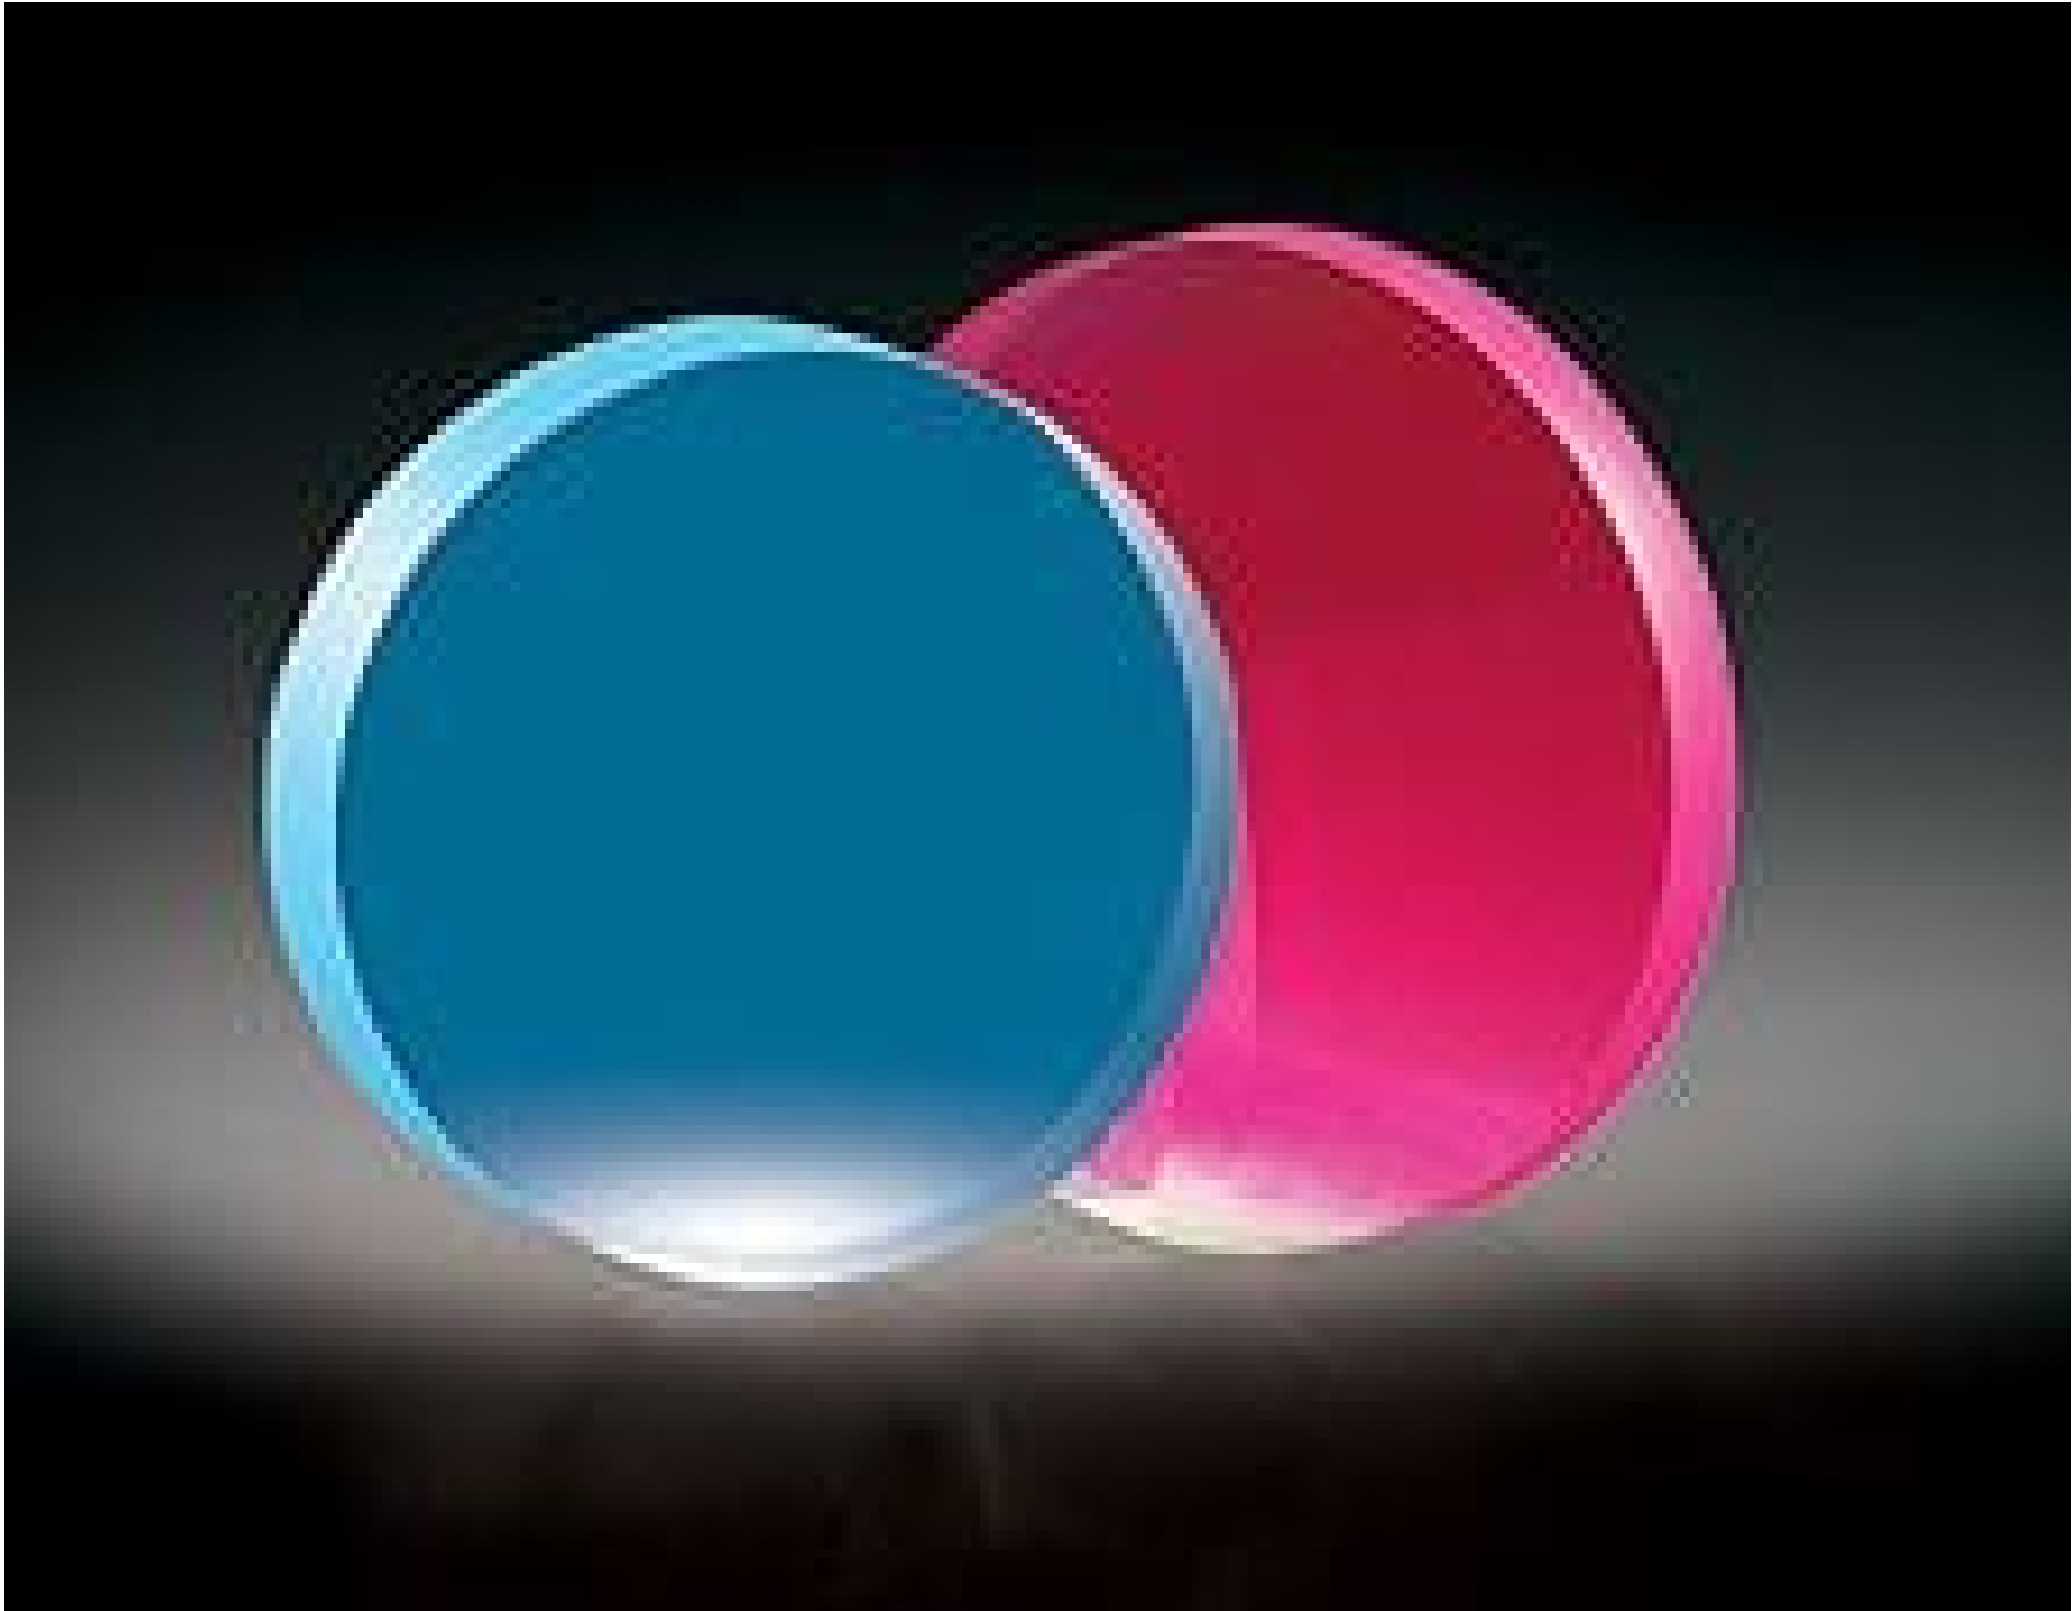

Stock **#21-168** **17 In Stock**

-

1

+

₹22,343

ADD TO CART

Volume Pricing	
Qty 1-9	₹22,343 each
Qty 10-25	₹19,774 each
Qty 26-49	₹18,684 each
Need More?	Request Quote

Product Downloads

General

Type:	Color Filter
-------	--------------

Physical & Mechanical Properties

Diameter (mm):	25.00 ±0.25
----------------	-------------

3.00 ±0.10	Thickness (mm):
Optical Properties	
Isuzu ICF-020	Glass/Filter Number:
Fluorescent Glass	Substrate: □
Uncoated	Coating:
Orange	Color:
1.541	Index of Refraction (n _d):
610	Peak Emission Wavelength (nm):
200 - 400	Excitation Wavelength (nm):
365.00	Peak Excitation Wavelength (nm):
Performance	
~1μW/cm ²	Minimum Sensitivity:
Material Properties	
494.5	Transformation Temperature (°C):
8.87	Coefficient of Thermal Expansion CTE (10 ⁻⁶ /°C):
Regulatory Compliance	
Compliant	RoHS 2015:
View	Certificate of Conformance:
Compliant	Reach 235:
Japan	Country of Origin:
Edmund Optics India Private Limited	Importer:


Product Details

- Excite with UV Illumination
- Wide Range of Fluorescence Colors
- High Sensitivity and Durability

Fluorescent Glass Filters absorb UV energy (peak absorption at 365nm) and re-emit light into the visible spectrum. Appearing colorless when not exposed to UV light, these filters are available with red, orange, yellow, green, blue, and purple emission colors. Sensitivity as low as ~1μW/cm2 allows for these filters to transform faint UV sources to detectable visible light. Fluorescent Glass Filters are ideal for use in fluorescence microscopy, excimer laser detection and characterization, and as a standard test material for fluorescence characteristics

These fluorescent glass filters are ideal for blocking excitation light while efficiently transmitting emission wavelengths in fluorescence imaging and spectroscopy. Manufactured from high-quality colored glass, they offer sharp spectral cutoffs and strong out-of-band blocking without the need for complex coating stacks. These durable glass filters are well-suited for use in research microscopes, fluorescence systems, and other light-sensitive optical setups requiring consistent and stable spectral performance.

Technical Information

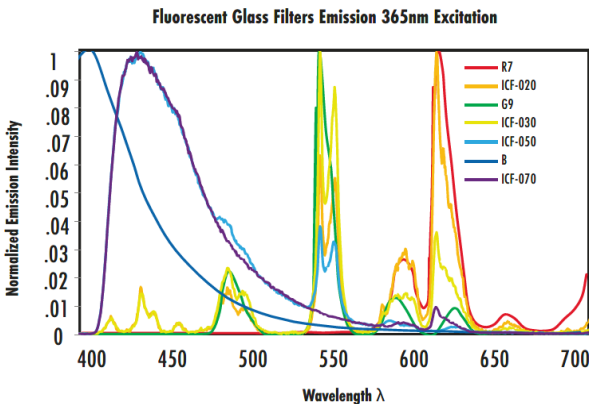

Compatible Mounts

