


## EO PREMIER POWER/ENERGY METER, #89-306

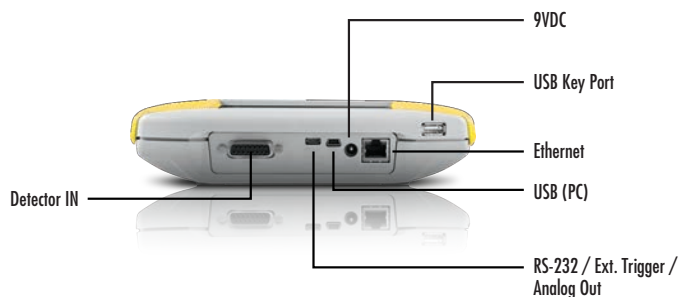

### FEATURES

#### 1. Reads the Following

Power Detectors	Stock#
0.210 - 1.08 $\mu\text{m}$ , 11 mW, Silicon	#89-310
0.420 - 1.08 $\mu\text{m}$ , 300 mW, Silicon	#89-309
0.19 - 20 $\mu\text{m}$ , 3 W, Thermopile	#89-312

Power & Energy Detectors	Stock#
0.3 - 2.5 $\mu\text{m}$ , 30 W, Volume Absorber	#89-590
0.19 - 20 $\mu\text{m}$ , 15 W, Thermopile	#89-313
0.19 - 10 $\mu\text{m}$ , 50 W, Thermopile	#89-591
0.19 - 20 $\mu\text{m}$ , 110 W, Thermopile	#89-592
0.19 - 20 $\mu\text{m}$ , 300 W, Thermopile	#89-593

Energy Detectors	Stock#
0.19 - 20 $\mu\text{m}$ , 3.8J, Pyroelectric	#89-594
0.19 - 20 $\mu\text{m}$ , 15J, Pyroelectric	#89-595

#### 2. Large Touch Screen Color LCD Display

- 5.6" Diagonal
- 640 x 480 Resolution
- 18 bit Color
- FULLY Touch Screen Controls

#### 3. Unique Ergonomic Design

Great for both handheld and tabletop use, with improved rubber bands and kickstand for better stability

#### 4. Intuitive User Interface

Easy to navigate interface, with many display features:

- Single or Dual Graph Display
- Instant Access to the Main Functions
- Function Search Tool
- Interface Available in Multiple Languages

#### 5. USB Key Access

Store data directly on a USB key

#### 6. Real-Time Statistical Functions

Max, Min, Average, Standard Deviation, RMS and PTP Stability, Pulse # and Repetition Rate

#### 7. Available Outputs

USB Key, Analog Output, RS-232, PC-USB, Ethernet



\*Also traceable to NRC-CNRC

## EO PREMIER POWER/ENERGY METER, #89-306

### SPECIFICATIONS

#### EO Premier Power/Energy Meter

Detector Types	All Edmund Optics Power and Energy Detectors
Display	Touch Screen 5.6 in Color LCD

### POWER METER SPECIFICATIONS

Power Range	
Thermopile	1 $\mu$ W to 30 kW
Photo Detector	4 pW to 3 W
Monitor Accuracy	0.25 % $\pm$ 5 $\mu$ V best scale
Statistics	Current Value, Max, Min, Average, Standard Deviation, RMS & PTP Stability, Time

### ENERGY METER SPECIFICATIONS

Energy Range	30 fJ to 30 kJ
Monitor Accuracy	$\pm$ 1 % best scale
Software Trigger Level	0.1 to 99.9 %, 0.1 % Resolution, default 2 %
Repetition Rate	2,000 Hz / 10,000 Hz in sampling
Real Time Data Transfer (To USB key)	2,000 Hz
Statistics	Current Value, Max, Min, Average, Std Dev., RMS & PTP Stability, Pulse #, Rep. Rate and Avg Power

### DETECTOR COMPATIBILITY

Thermopile	Average Power & Single Shot Energy
Photo Detector	Average Power & Pulse Energy
Pyroelectric	Pulse Energy & Average Power

### GENERAL SPECIFICATIONS

Interface Languages	English, German, French and Japanese
Digital Display Size	112.9 x 84.7 mm LCD - 640 x 480 pixels
Data Display	Real Time, Scope, Statistics, Digital Tuning Needle and Averaging
Analog Output	0-1 Volt, Full Scale, $\pm$ 0.5 %
Rising Edge External Trigger	TTL Compatible, 2 - 25 V @ 0.4 mA
Serial Commands Via	USB (standard), Ethernet or RS-232 (cable in option)
Internet Upgrades Via	USB key
Data Storage Via	USB key
Dimensions (mm)	210 W x 122 H x 45 D
Weight (With Batteries)	0.67 kg
Battery Type	Rechargeable 1.2 V Ni-MH AA (x4)
Battery Life	6.5 hours
External Power Supply	100/240 VAC 50-60 Hz to 9 VDC 1.66 A



\*Also traceable to NRC-CNRC

## EO PREMIER POWER/ENERGY METER, #89-306



### 1. HOME

- Set Device:** Set all the parameters related to your EO Premier Power/Energy Meter device.
- Set Measure:** Set all the parameters related to your sensor.
- Display:** Set the device in dual or full screen display mode and choose the display(s) you want.
- Acquisition:** Set all your acquisition parameters (time, sample rate, etc.).
- Startup Config:** Choose how your EO Premier Power/Energy Meter will remember your sensor setting at startup.
- About:** View the main parameters and update your EO Premier Power/Energy Meter.



### 2. SET DEVICE

Use the elements in this menu to set the parameters related to your EO Premier Power/Energy Meter.

- Number of Digits:** Use this menu to set the precision of the measurement.
- Serial Commands:** Use the RS-232, USB and analog outputs.
- Ethernet:** Configure the Ethernet communication protocol.
- Languages:** Select the display language: English, German, Japanese or French (Firmware V1.04.02 or higher)





### 3. SET MEASURE

Use the elements in this menu to set everything related to your measurements.


- Wavelength:** Select one of the standard wavelengths offered, enter a custom value and create your own list of standard wavelengths.
- Range:** Set the measuring range to autoscale or a fixed scale.
- Measure Mode:** Use this menu to decide what type of measurements will be displayed: average power, single shot energy, pulse-to-pulse energy, etc.
- Corrections:** Enter multipliers and offsets.
- Trigger Level:** Set the trigger level in 0.1% steps, from 0.1% and 99.9%.



### 4. DUAL SCREEN DISPLAY (SHOWN WITH SCOPE DISPLAY)

With the Dual Screen mode, the EO Premier really takes full advantage of its extra-large screen! Any display mode can be used in both single or dual display mode. In dual display mode, the Real Time display takes the upper portion of the screen, while any of the other displays (Scope, Needle, Averaging or Statistics) is set on the lower portion. The display in the lower portion can be easily changed using the parameters bar with drop-down menus in the center of the screen. You can also expand one of the displays to have it in Full Screen mode using the maximize  button. Just as easily, you can go back to Dual Screen display by using the minimize  button.


## EO PREMIER POWER/ENERGY METER, #89-306

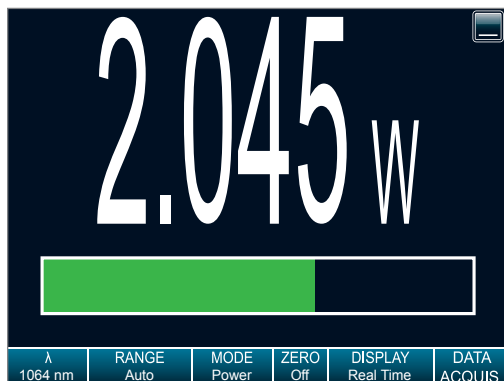

### 5. REAL TIME DISPLAY

This display shows the measured value in real time, with a corresponding bar graph below. The large size of the digits and high contrast of the graphics allow the user to see the measurement from a good distance. This mode is also always present in dual screen mode, in the upper portion of the screen.

- Very Large Digits
- Bar Graph

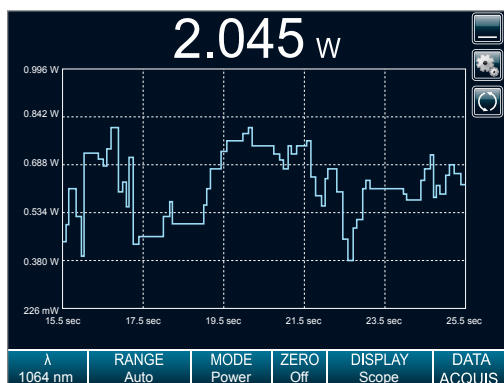

### 6. SCOPE DISPLAY

With its line filling from the right of the screen, in a first-in/first-out manner, this display mode is a good approximation of an actual oscilloscope reading. Settings include time (x-axis) and range (y-axis). Basic statistics can also be displayed directly on the screen.

- Oscilloscope-type Graph
- On-screen, Real Time Statistics (Min, Max and Average)
- Fully Customizable x and y Axis



### 7. NEEDLE DISPLAY

Exactly like an analog needle, only faster! This mode is particularly useful when tuning a laser. The Real Time value is also displayed at the top of the screen.

- Ultra-fast Readings
- Great for Tuning
- Real Time Value at the Top of the Screen
- Min and Max Values Hold



### 8. AVERAGE DISPLAY

This very unique mode is perfect to show the trend of a laser over time. Set the number of points per batch and let the EO Premier Power/Energy Meter identify the minimum and maximum values of every batch. A yellow curve then follows the average of each batch, displayed as bars on the screen. The wider the difference between the white and blue portions of a bar (corresponding to the min and max values), the more unstable your laser is.

- Calculates the Min, Max and Average Values of Batches of Measurements
- Perfect to Check Laser Stability Over Time